

How to provide Measurement: Eyelet Curtains

Curtain width :

Measure the opening from one end to the other (edge to edge)

Curtain height :

Height measurement should be from top of the Rod down to the where you want the bottom of the panel to hang




Rod length :

Measure the Full length of the rod

Rod thickness :

Curtains are prefitted with cm wide eyelets. Kindly ensure your curtain rod will pass through these.

(Provides all Measurements in Inches)

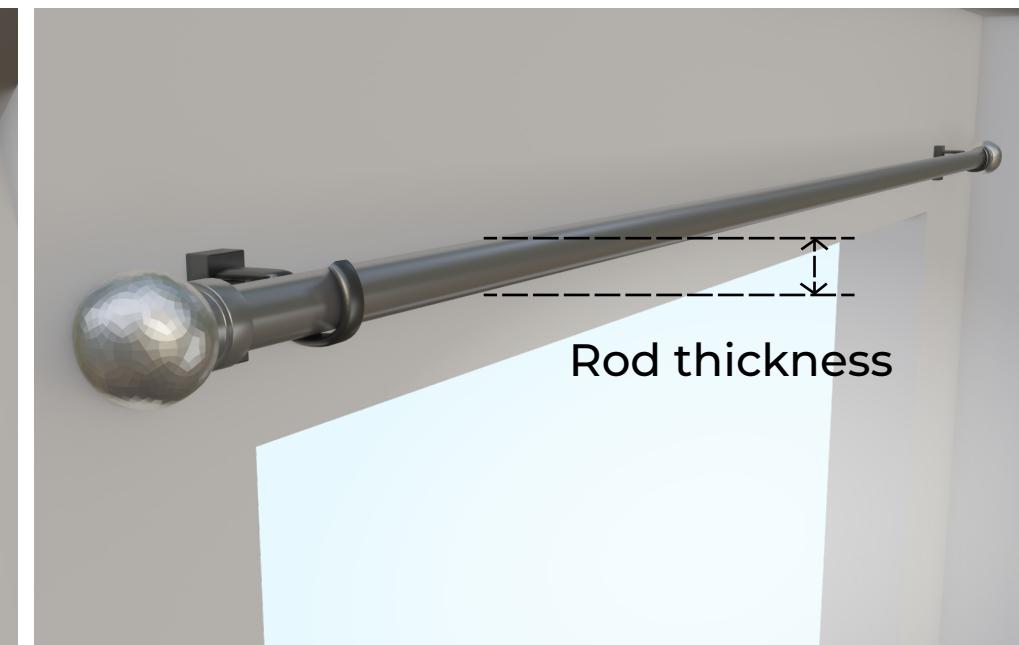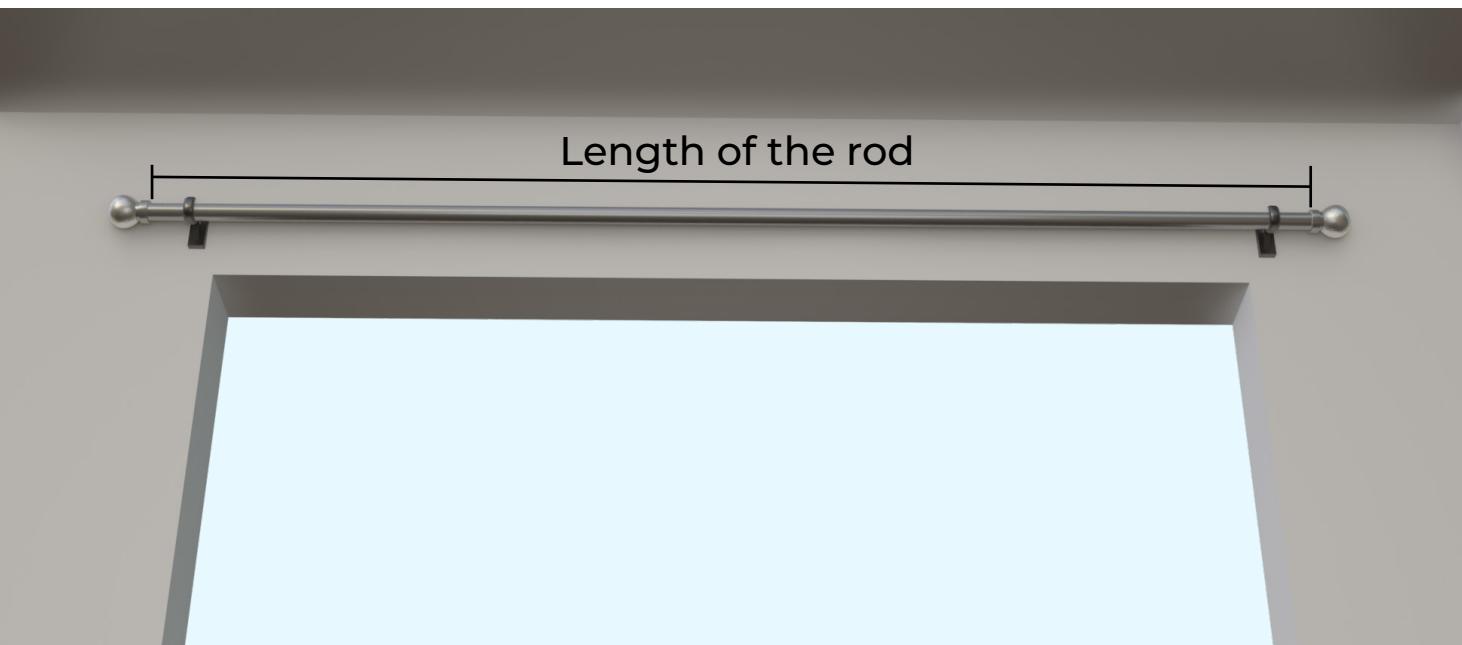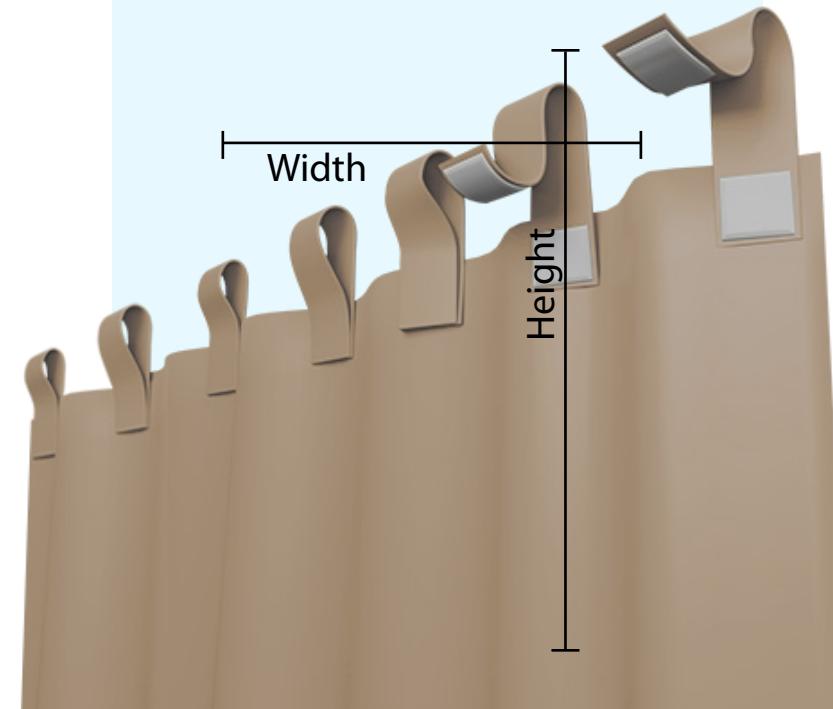

Step 1

Takeout the rod from the brackets




Step 2

Remove the ends of the curtain rod




Step 3

Before inserting the rod in the curtain Eyelets, kindly fold the curtain as shows below

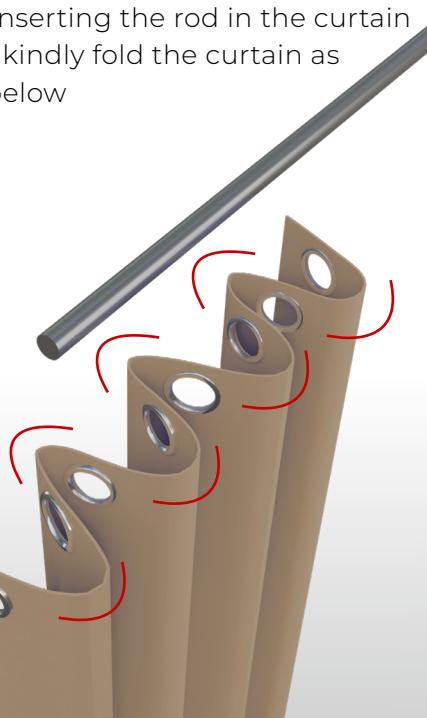


Step 4

Insert the rod through the Eyelets starting from the front

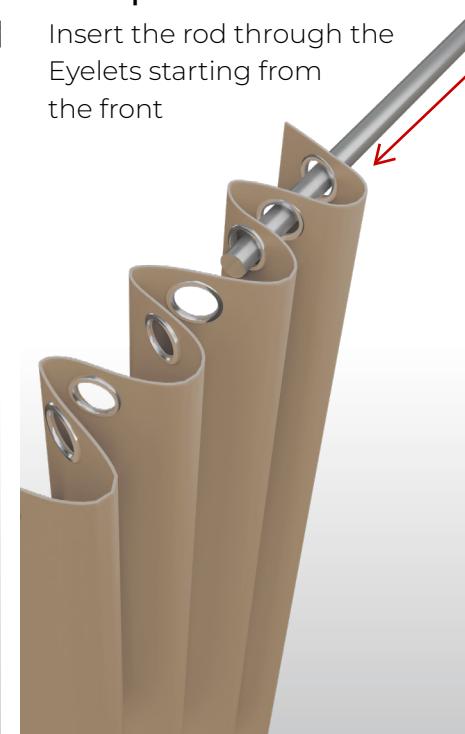


Step 5

Repeat the same for the other curtain

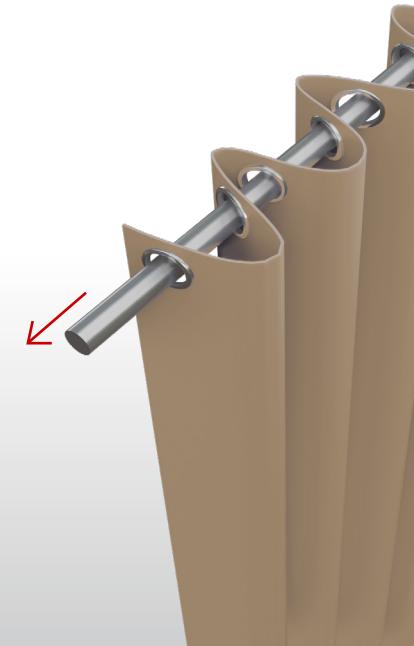


Step 6

Reattach the ends of the curtain rod

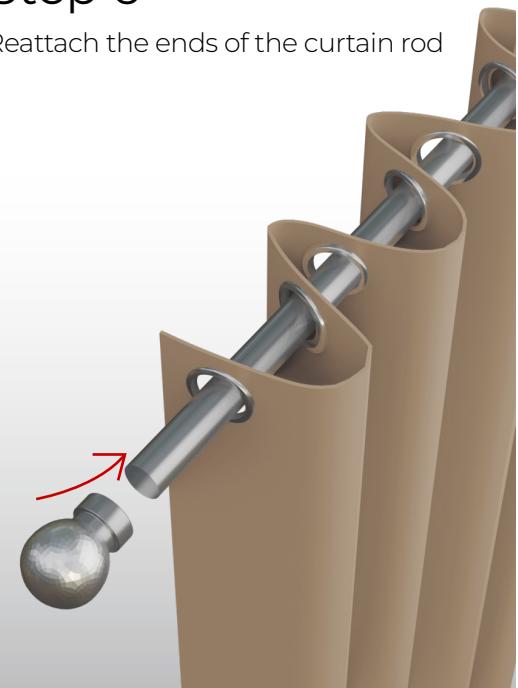


Step 7

Place the curtain rod onto the brackets

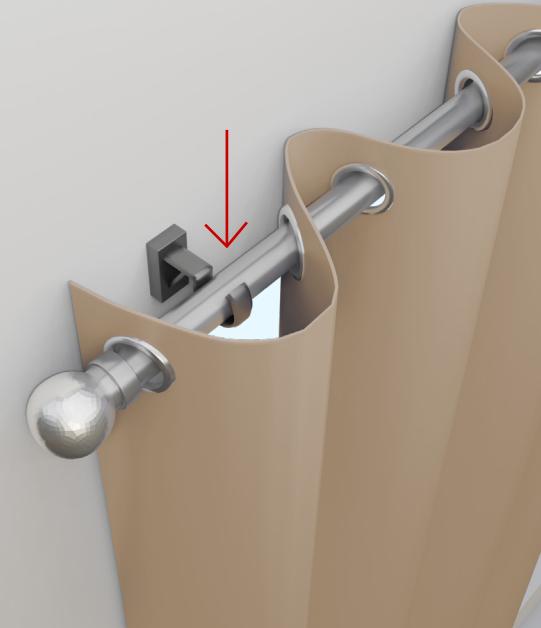

Step 8

Move the curtain so that the outer eyelets are outside the brackets

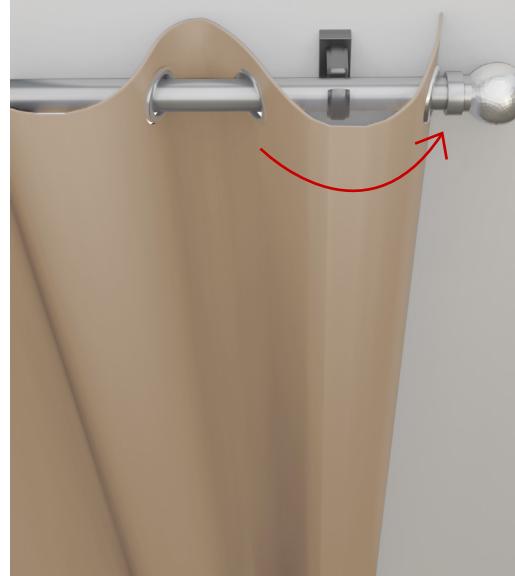

Now the curtain is ready to use

